
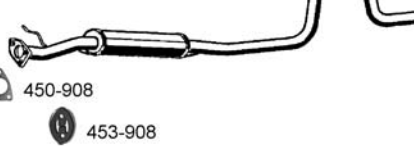

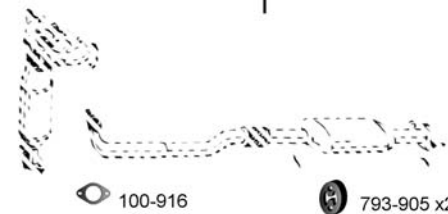



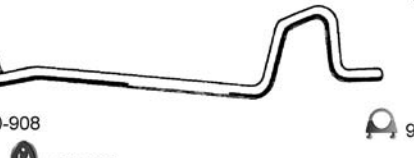


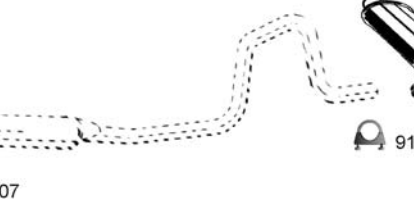



<p>ESR4069 <b>N.A.</b></p> <p><b>N.A.</b></p>  <p>450-913</p> <p>450-908</p> <p>453-908</p>	<p>WCE103970 <b>30.009</b></p>  <p>450-908</p> <p>453-908</p>	<p>WCG000051 <b>30.010</b></p>  <p>793-905 x2</p> <p>911-954</p>	<p><b>Freelander</b> 2555 mm <b>1.8i</b> - 16V 02/98 - 11/00 (1796 cc), 88 KW</p> <p>LR301000</p>
<p><b>N.A.</b></p> <p><b>N.A.</b></p>  <p>100-916</p> <p>793-905 x2</p> <p>130-913</p>	<p>WCE105202 <b>30.011</b></p> 	<p>WCG000051 <b>30.010</b></p>  <p>793-905 x2</p> <p>911-954</p>	<p><b>Freelander</b> 2555 mm <b>1.8i</b> - 16V 11/00 - (1796 cc), 86 KW</p> <p>LR301005</p>
<p>WCD105220 <b>N.A.</b></p> <p><b>N.A.</b></p>  <p>450-908</p> <p>453-908</p> <p>450-908</p> <p>453-908</p>	<p>WCE104230 <b>30.012</b></p>  <p>450-908</p> <p>453-908</p>	<p>WDV500020 <b>30.013</b></p>  <p>793-905 x2</p> <p>911-965</p>	<p><b>Freelander</b> 2555 mm <b>2.0 Di Turbo Diesel</b> 02/98 - 11/00 (1994 cc), 72 KW</p> <p>LR301050</p>
<p>WCD106180 <b>N.A.</b></p>  <p>450-908</p> <p>453-907</p>	<p><b>N.A.</b></p> 	<p>WCG000032 <b>30.014</b></p>  <p>793-905 x2</p> <p>911-965</p>	<p><b>Freelander</b> 2555 mm <b>2.0 TDi Turbo Diesel</b> 11/00 - (1951 cc), 80 KW (1951 cc), 82 KW</p> <p>LR301055</p>

**100-916**  Freelande (11/00-)

---

**130-913**  Freelande (11/00-)

---

**450-908**  Freelande (02/98-)

---

**450-913**  Freelande (02/98-11/00)

---

**453-907**  Freelande (11/00-)

---

**453-908**  Freelande (02/98-11/00)

---

**793-905**  Freelande (02/98-)

---

**911-954**  Freelande (02/98-)

---

**911-965**  Freelande (02/98-)

---

---

**30.009** 453-908, 911-954

---

**30.010** 793-905 2x, 911-954

---

**30.012** 453-908, 911-965

---

**30.013** 793-905 2x

---

**30.014** 793-905 2x, 911-965

---